



www.sennheiser.com/download



Evolution Wireless Digital Portable

EW-DP EK, EW-D SK, EW-DP SKP, EW-D SKM-S

Smart Assist



Quick Guide

Kurzanleitung

Guide rapide

Guida rapida

Guía de inicio rápido

Guia rápido

Beknopte handleiding

Krótka instrukcja obsługi

Snabbguide

Kort vejledning

Pikaohje

Γρήγορος οδηγός

Kisa Kilavuz

Краткая инструкция

簡要说明

快速使用指南

クイックガイド

요약 안내서



Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com



Printed in Germany
Publ. 05/24, 592859/A05

SENNHEISER

EW-DP EK

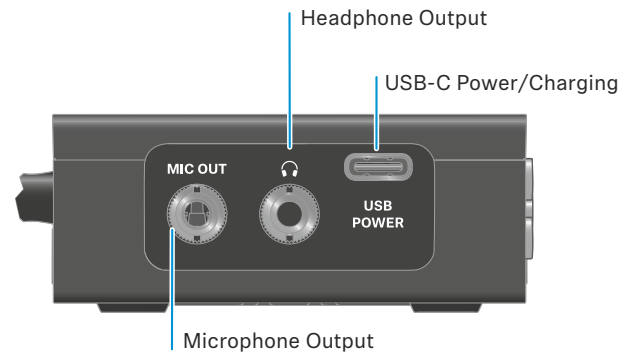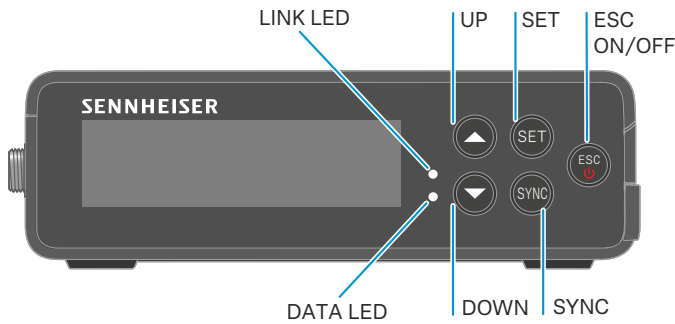

EW-DP SKP

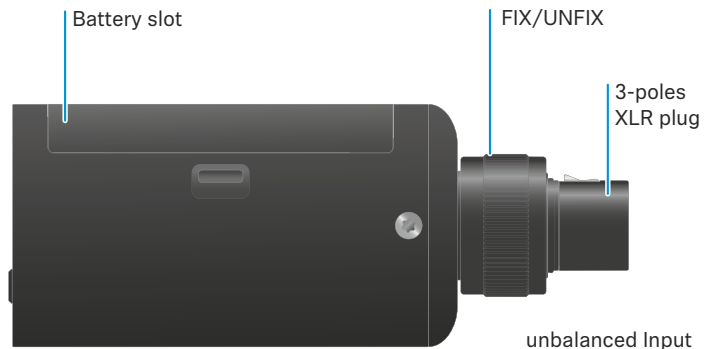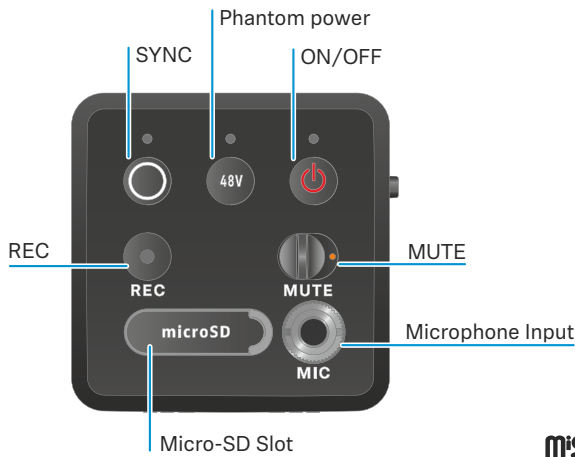


unbalanced Input	
PIN 1	⏚
PIN 2	- (P48)
PIN 3	+

EW-D SKM-S






EW-D SK

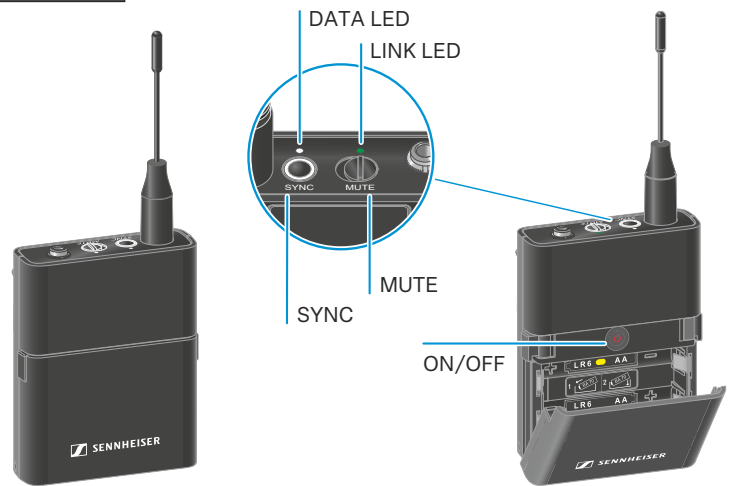

LEDs

LINK LED/ PWR LED (SKP)	
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- Device switched off

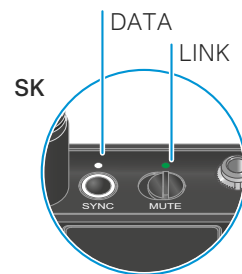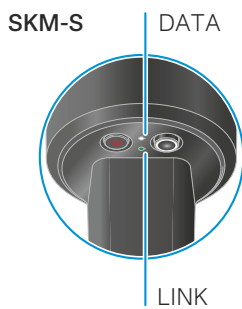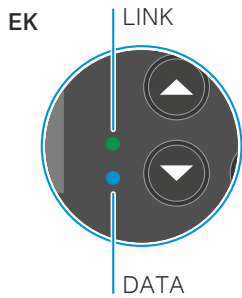


DATA LED	
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress




Identify/Battery check

 On -> Identify/Check




LINK LED SK/SKP/SKM-S	
	≤ 100 %
	≤ 60 %
	≤ 20 %

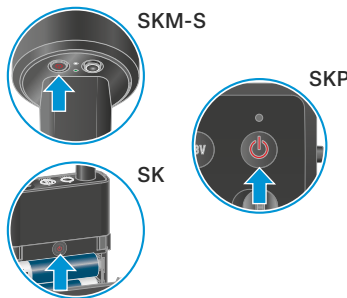


Display of synced EK




Sync

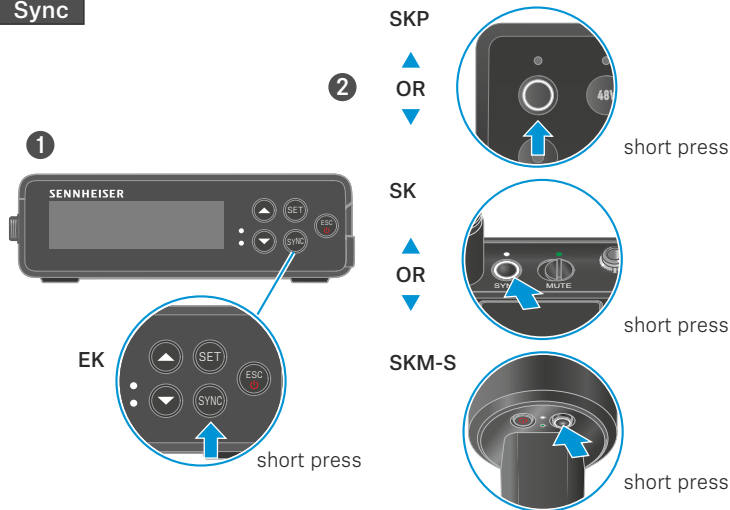


EK Stacking/ Mounting plate

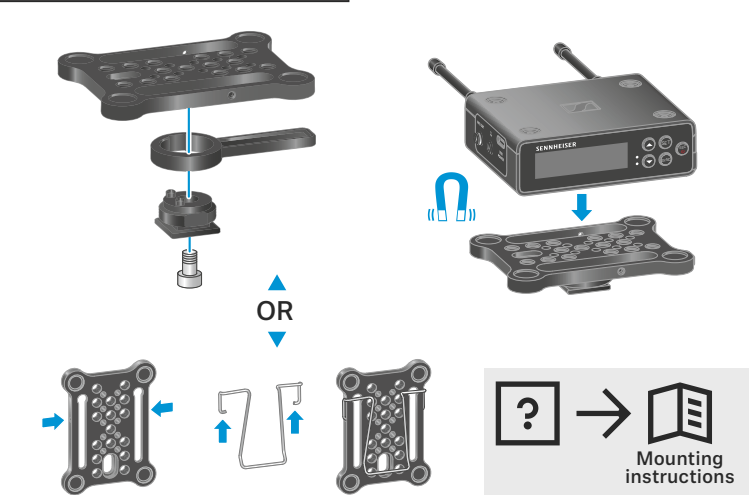


SKP Attach & Record

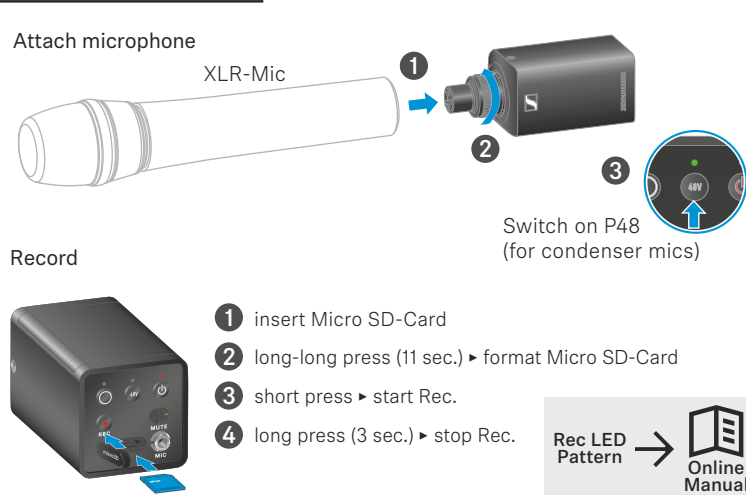

Mic Handling

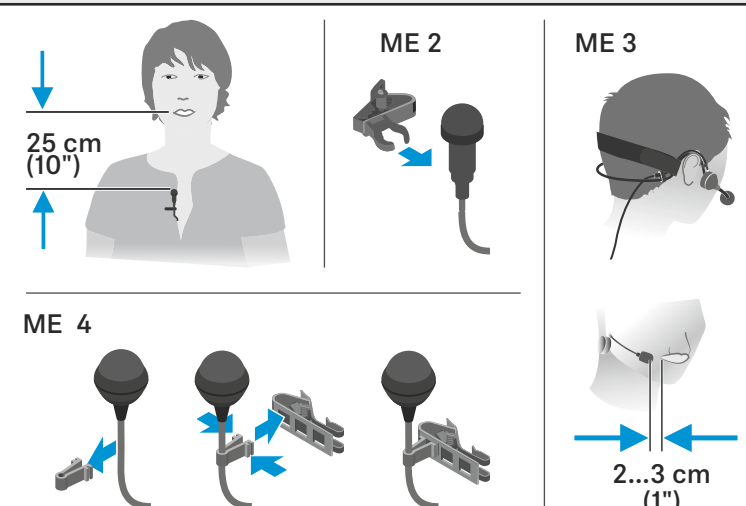


On/Off

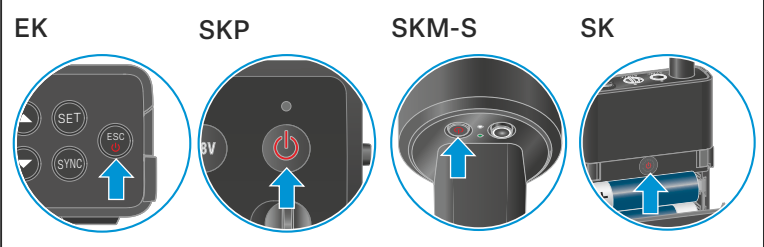


Off -> On On -> Off

	EK/SKP/SK/SKM-S		EK/SKP/SK/SKM-S
short	on	long	off

EK Setup

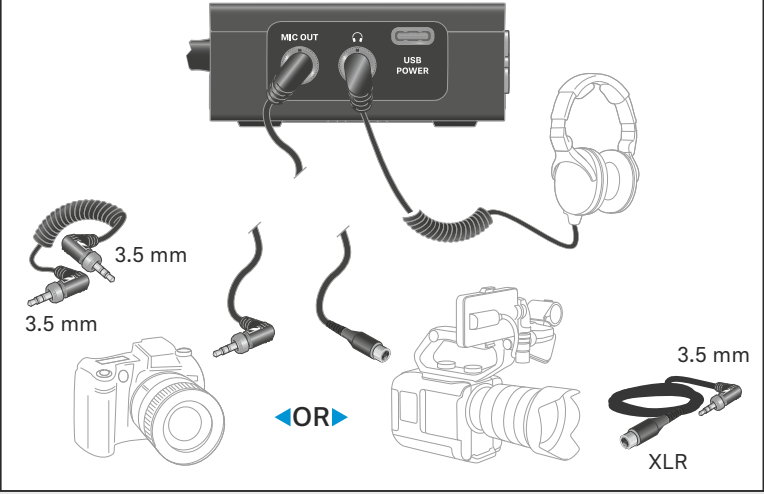



Mute

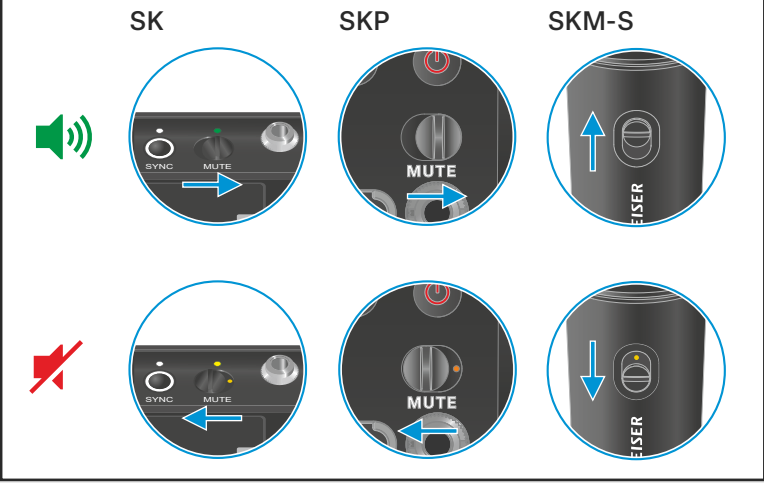



EK Power Supply / Charging






Battery

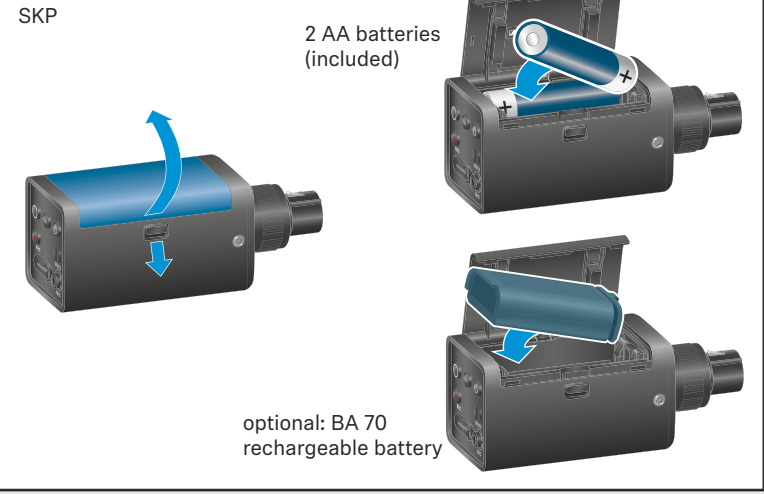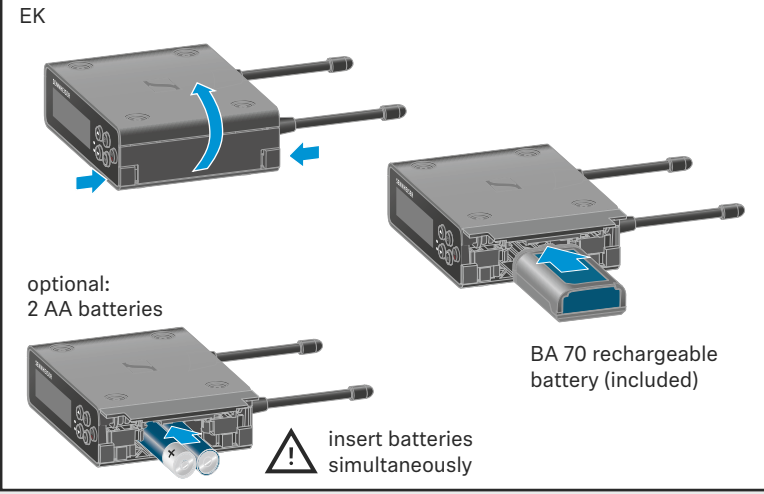


Battery

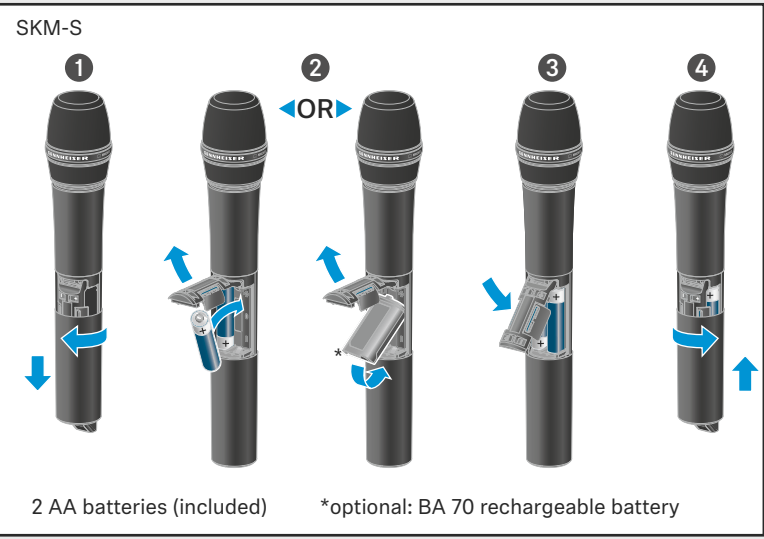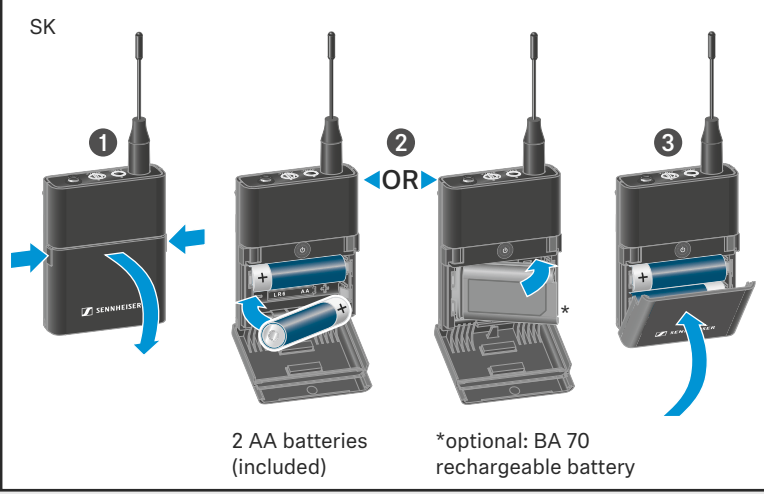

EK Display

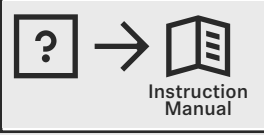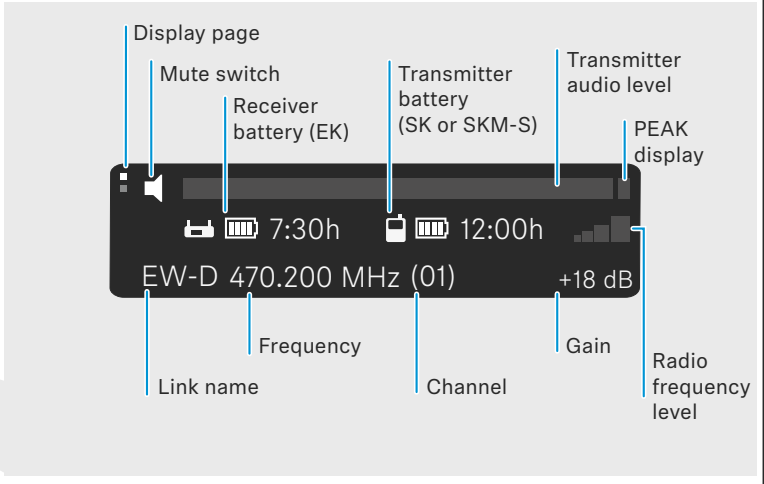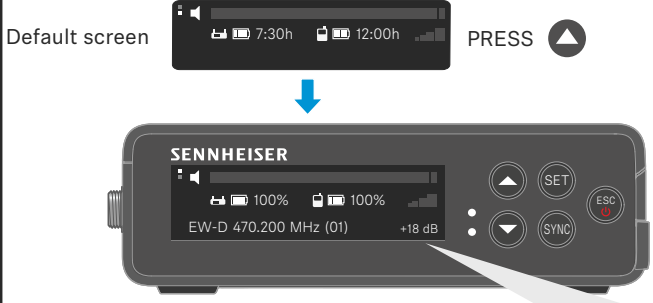

EK Menu

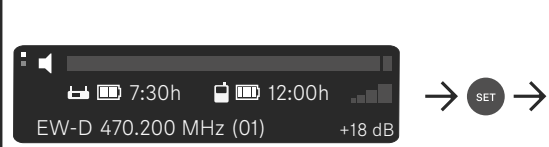

Gain Output level	SET	→ SET →	Gain +21 dB	SET
Output level Headphone	SET	→ SET →	Output level -15 dB	SET
Headphone Mute switch	SET	→ SET →	Headphone	SET
Mute switch Auto scan	SET	→ SET →	Mute switch ignored	SET
Auto scan Channel	SET	→ SET →	Auto scan 526.000 MHz (94)	SET
Channel Frequency	SET	→ SET →	Channel 94 526.000 MHz	SET
Frequency Brightness	SET	→ SET →	Frequency 470 .200 MHz	SET
Brightness Reset	SET	→ SET →	Brightness 60 %	SET
Reset	SET	→ SET →	Reset to factory defaults?	Yes SET No ESC

www.sennheiser.com/download

- Instruction manual
- Bedienungsanleitung
- Notice d'emploi
- Istruzioni per l'uso
- Instrucciones de manejo
- Manual de instruções
- Gebbruiksaanwijzing
- Instrukcja obsługi
- Bruksanvisning
- Betjenings vejledning
- Käyttöohje
- Οδηγίες λειτουργίας
- Kullanım kılavuzu
- Инструкция по эксплуатации
- 使用说明书
- 取扱説明書
- 사용 설명서

Smart Assist

Available on the **App Store**

ANDROID APP ON **Google play**