



**A1) Establish the necessary connections.**

**A2) Charge the accupack for 24 hours before you use it for the first time!**

**B1) Insert the accupack into the battery compartment on the headphones.**

**B2) Switch on the headphones by setting the switch on the right earpiece to ON.**

**B3) Turn the TUNE control on the right earpiece until you can hear the audio signal loud and clear. If interference is present, select a different transmission channel and set the headphones to the respective frequency.**

**B4) Set the volume on the sound source to your normal listening level, or slightly higher. Then adjust the volume on the headphones to suit.**

**B5) Switch off the headphones. For charging the accupack, insert it into the charging compartment on the transmitter. The red LED must light up. The transmitter automatically switches off approx. 3 minutes after detecting no incoming audio signal.**

ATTENTION: Listening at high volume levels for long periods can permanently damage your hearing.

2-year warranty

When eventually the accupack becomes totally exhausted and cannot be recharged, please dispose of it as special waste. Only use original Sennheiser spare parts and accessories. Components from other manufacturers may cause damage to the device and will invalidate the guarantee.

This device has been type-approved to EN 300 220-1 Nov.97 and is in compliance with the applicable CE standards and regulations.

CE 0682

**SENNHEISER**

Sennheiser electronic GmbH & Co. KG  
D-30900 Wedemark  
Telefon +49 (0) 5130/600-0  
Telefax +49 (0) 5130/600-300  
www.sennheiser.com  
Printed in Germany  
Publ. 01/01 82234/A03