



XS WIRELESS 1

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Sets		Lavalier Set	Headmic Set
	XSW 1-825	XSW 1-835	XSW 1-C11	XSW 1-908	XSW 1-ME2	XSW 1-ME3
XS WIRELESS 1						
EM-XSW 1 NT 12-5CW	•	•	•	•	•	•
SKM 825-XSW 	•	○	○	○	○	○
MZQ 1 SKM 835-XSW	○	•	○	○	○	○
SK-XSW 	○	○	•	•	•	•
e 908T 	○	○	○	○	○	○
ME 2-2 	○	○	○	○	•	○
ME 3-II 	○	○	○	○	○	•
CI 1-N 	○	○	•	○	○	○
2 x AA LR6 1.5 V 	•	•	•	•	•	•

Battery

- Slide the battery cover open.
- Insert the battery with the correct polarity.
- Slide the cover closed.

Low Battery

~ 10 h

~ 7 h

~ 3 h

Low Batt

Setup

XLR-3 OR **6.3 mm**

Line Mic

EU, **US**, **UK**, **AU**, **CN**, **KOR**

ME 2-2, **e 908T**, **ME 3-II**, **CI 1-N**

On/off

1s on
3s off

OR

OR

Display

EM-XSW 1

Bank 1...8 **Channel 0...9**

Sensivity **Sync** **Low battery**

Volume

0...9

0 1 2 3 4 5 6 7 8 9

Set / Scan

Mute

Audio on

Audio off

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
Printed in Germany, Publ. 02/17, 571312/A02

Change frequency

Automatically/Scan

1. Turn the device **Off**.
2. Press **Set/Scan** for **3s**.
3. The display shows **23**.
4. Press **Set/Scan** again. A green checkmark indicates success.

Manually

Bank Channel

1. Press **Set/Scan**.
2. The display shows **13**. Press **CH+**.
3. The display shows **23**. Press **Set/Scan**.
4. Press **Set/Scan** again.
5. A green checkmark indicates success.

Sync

⚠️ ❌

1. Press **hold** on the transmitter and receiver. The display shows **23** and **Syn**. A green checkmark indicates success.
2. Press **1x** on the transmitter. The display shows **23** and **Syn**. A green checkmark indicates success.

OR

Bank Ch. 1 1 925.300

Bank Ch. 2 3 929.100

Sensitivity

Level

- 0 dB
- 10 dB
- 20 dB
- 30 dB

OR

Multichannel

Bank 1...8
Ch. 0...9

max. 10 ch.

Bank CH.	Bank CH.	Bank CH.	Bank CH.	
23	24	25	26	✓
11	12	13	18	✓
23	13	47	89	✗
23	23	23	23	✗

ME 2-2

25 cm (10")

ME 3-II

2...3 cm (1")

Min. distance

> 5 m (16'5")

SKM

Guitar pickup

> 20 cm (8")

Squelch

min. SQ

max. SQ